




TO ASSEMBLE THIS, YOU'LL
NEED THE FOLLOWING
TOOLS:

4MM LONG ALLEN KEY
(THERE'LL BE ONE IN YOUR TOOL
BOX)

OR YOU MAY PREFER
TO USE AN ELECTRIC OR
BATTERY DRILL WITH A 4MM
ALLEN BIT FOR THE CASTERS


LAMELLO

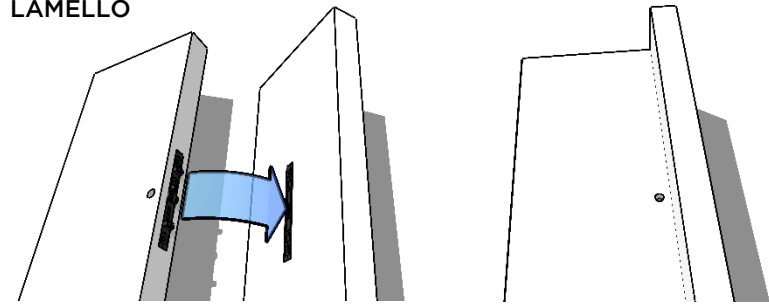

Unlike traditional cam fixings, the fixings we use are designed not to be seen when the unit is assembled. To fit them, simply align the pair of fixings, and use an allen key in the adjacent hole to join twist the lever from one into the other.


1

First, fit the two uprights to the base panel with the Lamello fixings.

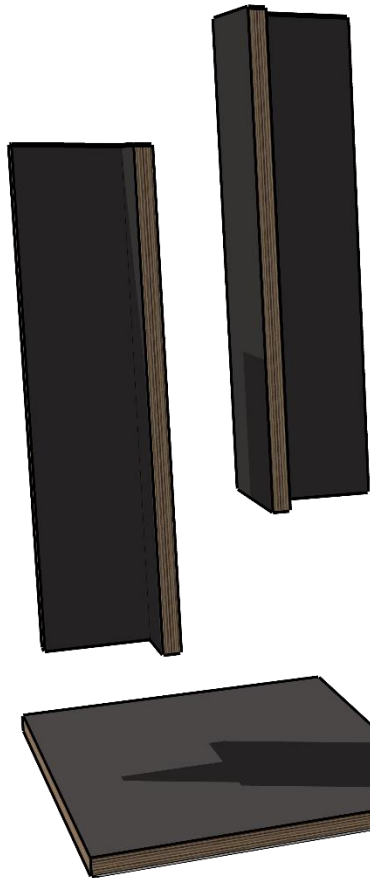


2

Next, turn it onto its side and fix the casters using the 15mm M6 bolts.

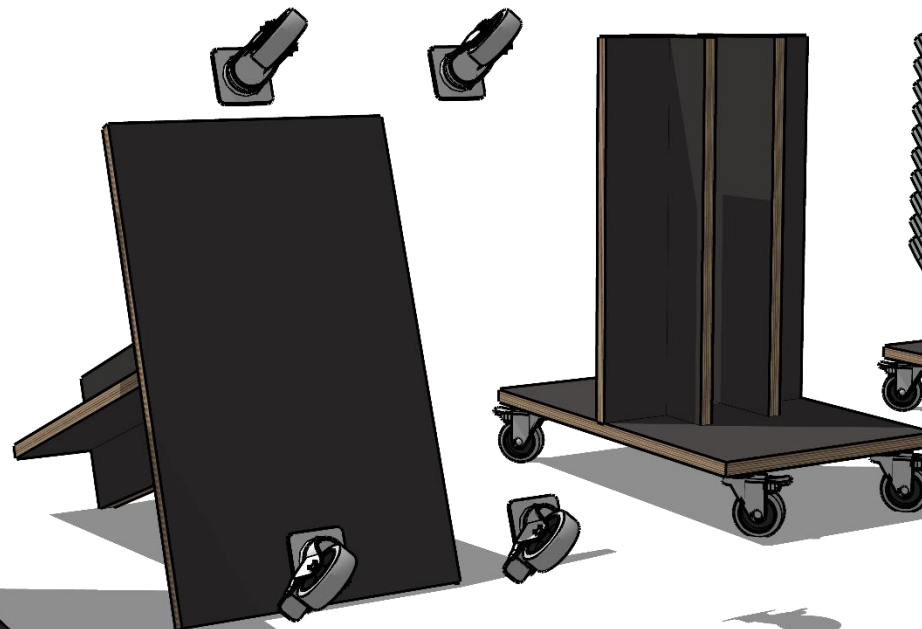

3

Turn it over and it's ready for you to add the ZigZags (sold separately).

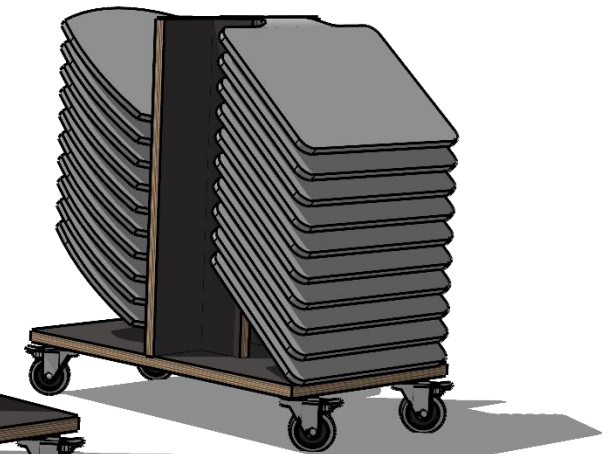

learniture

ASSEMBLY INSTRUCTIONS

ZIG|ZAG TROLLEY

learniture

www.learniture.co.uk
+44 (0) 1491 352152

ZIG-INS R1 06/21

